


JET








OPERATOR'S MANUAL

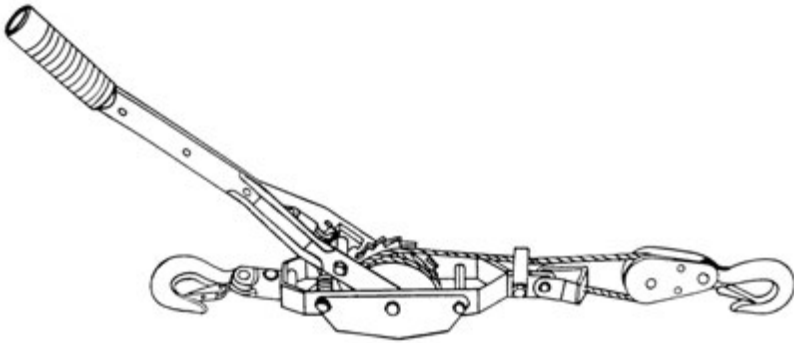CABLE HAND PULLER

PROD. NO. 111225 MOD. NO. JCPP-200
PROD. NO. 111228 MOD. NO. JCPP-400D



MULTI-FUNCTIONAL USE

 <p>RECREATIONAL</p>	 <p>FENCING</p>	 <p>INDUSTRIAL</p>
 <p>EMERGENCY</p>	 <p>FRAMING</p>	



ONE YEAR LIMITED WARRANTY

JET™ Cable Hand Pullers are guaranteed to be free of defects in material and workmanship. If one of these products fails during the first year of operation due to defective material or workmanship it will be repaired or replaced at our discretion. Normal wear and tear on moving parts is excluded from this guarantee. This guarantee does not apply to any product showing signs of misuse, overloading, alteration, or improper maintenance.

WARRANTY PROCEDURE

After receiving authorization from one of the offices listed below, any product for which there is a warranty claim must be returned prepaid to an authorized JET™ warranty depot along with proof of purchase.

Addresses for information on JET™ Material Handling products, warranty depots or distributors:

Vancouver

3260 Production Way
Burnaby, B.C.
V5A 4W4
Tel:(604) 444-5300
Toll free: 1-800-472-7685
Fax:(604) 444-9227

Edmonton

5239 86th Street
Edmonton, Alberta
T6E 6T1
Toll free:1-800-472-7685
Fax:1-800-663-7742

Winnipeg

951 Powell Avenue
Winnipeg, Manitoba
R3H 0H4
Tel:(204)632-6970
Toll free:1-800-665-7524
Fax:(204)694-9534

Toronto

416 Watline Avenue
Mississauga, Ontario
L4Z 1X2
Tel:(905)502-8665
Toll free:1-800-387-3879
Fax:(905)502-7707

Montreal

4620, rue Garand
St-Laurent, Quebec
H4R 2A2
Sans frais:
Tél:1-800-363-2885
Télécopieur:1-800-267-3310

Halifax


#110-11 Morris Drive
Dartmouth, Nova Scotia
B3B 1M2
Tel:(902)468-8324
Toll free:1-800-472-7686
Fax:(902)468-3461

TO RELEASE TENSION

Depress pawl spring in direction of arrow “A”. Steadily push handle until drive pawl pushes and disengages stop pawl (not shown) to clear ratchet teeth. This releases load one notch. Repeat this handle motion as required to release tension a notch at a time.

CAUTION!

WHEN RELEASING LOAD AVOID ABRUPT HANDLE MOVEMENTS. APPLY PRESSURE TO HANDLE WITH AN EVEN AND STEADY FORCE.

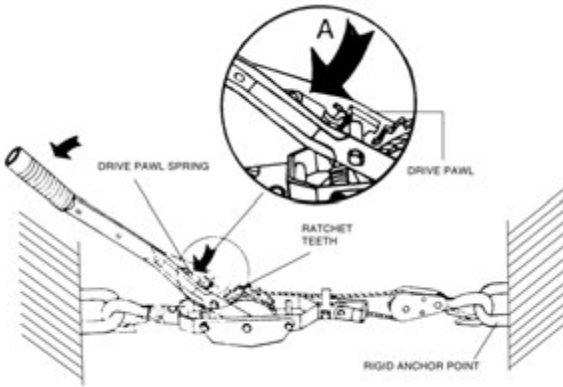


Prod. No.	Mod. No.	Pulling Capacity Single Line	Pulling Capacity Double Line	Lifting Capacity Single Line	Lifting Capacity Double Line	Cable Diameter	Leverage
111225	JCPP-200	N/A	2 ton	N/A	1 ton	3/16"	15:1
111228	JCPP-400D	2 ton	4 ton	1 ton	2 ton	1/4"	15:1

CABLE REPLACEMENT

A “keyhole” opening of special quick-change design in the barrel of the ratchet wheel and a swaged end to the cable permit instant, secure replacement of the cable. Pull all the cable off the ratchet wheel; snap old cable out of “keyhole”, snap in new cable, and then rewind cable onto ratchet wheel.

TO RAISE LOAD OR APPLY TENSION

Engage drive pawl and ratchet wheel by pushing pawl spring in direction of arrow “A” and then raise the handle towards the direction of arrow “C”. Each stroke of handle will wind cable to pull load.

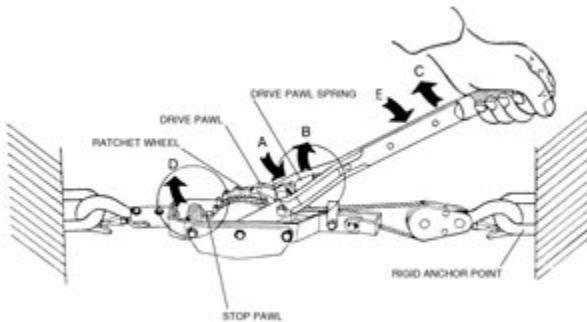

TO EXTEND CABLE

Secure hook and pulley to a rigid anchor. Depress drive pawl spring in direction of arrow “B”. Raise handle and hold firmly towards the direction of arrow “E”, then depress stop pawl in direction of arrow “D” and at the same time pull until desired slack is obtained.

CAUTION!

MAKE SURE YOUR HAND POWER PULLER IS MAINTAINED IN SAFE AND PROPER WORKING CONDITION BY OBSERVING THE FOLLOWING RULES:

1. Inspect cable regularly to examine for frays, kinks, broken strands or distortion. The cable should be replaced once one of the above situations has occurred.
2. **DO NOT** pull cable over or around a corner.
3. **DO NOT** wrap cable around any object and hook it back on itself.
4. **DO NOT** overload; know how much load you are pulling.
5. **DO NOT** use a “cheater” pipe or another device to lengthen the handle for additional leverage. This will destroy the puller itself.
6. **DO NOT** operate puller with less than 3 wraps of cable on the spindle.
7. Please do use an adequate sling, eyebolt or other accessory attached to the load to be pulled. And make sure that there is positive engagement of the puller hook to the load.
8. **DO NOT** lift people or lift over people.