

Accessories

Replacement Keys

Part Number	Description	to use with holder size
1/2-KEYSET	two 1/4" rotating pins	1/2"
3/4-KEYSET	two 5/16" keys with screws	3/4"
1-KEYSET	two 3/8" keys with screws	1"
1-1/4-KEYSET	two 1/2" keys with screws	1-1/4"
1-1/2-KEYSET	two 5/8" keys with screws	1-1/2"
2-KEYSET	two 3/4" keys with screws	2"
2-1/2-KEYSET	two 1" keys with screws	2-1/2"
22-KEYSET	two 10mm keys with screws	22mm
27-KEYSET	two 12mm keys with screws	27mm
32-KEYSET	two 14mm keys with screws	32mm
40-KEYSET	two 16mm keys with screws	40mm



Replacement Arbor Screws

Part Number	to use with holder size
A5/8-11	Face Mill Mounting Bolt
A1/4-28	1/2"
A3/8-24	3/4"
A1/2-20	1"
A5/8-18	1-1/4"
A3/4-16	1-1/2"
A1-14	2"
A10mm-P1.5	22.0mm
A12mm-P1.75	27.0mm
A16mm-P2	32.0mm
A20mm-P2.5	40.0mm



Coolant Tube Wrench for HSK holders

Part Number	Description
HSK63-WRENCH	Wrench for HSK63 Coolant Tube
HSK40-WRENCH	Wrench for HSK40 Coolant Tube
HSK100-WRENCH	Wrench for HSK100 Coolant Tube

Coolant tube wrenches are needed to remove or install coolant tubes in HSK toolholders



Coolant Tube for HSK holders

Part Number	Description
HSK63-TUBE	Coolant tube for HSK63 holders
HSK40-TUBE	Coolant tube for HSK40 holders
HSK100-TUBE	Coolant tube for HSK100 holders

