


HSK 100A Shrink Fit Holders



EXTENDED


Part Number	d	A	D2	D3
H100A-SF0250-6.30	1/4"	6.30"	0.83"	1.06"
H100A-SF0375-6.30	3/8"	6.30"	0.94"	1.26"
H100A-SF0500-6.30	1/2"	6.30"	0.94"	1.26"
H100A-SF0625-6.30	5/8"	6.30"	1.06"	1.34"
H100A-SF0750-6.30	3/4"	6.30"	1.30"	1.65"
H100A-SF1000-6.30	1"	6.30"	1.73"	2.09"
H100A-SF1250-6.30	1.1/4"	6.30"	1.73"	2.09"
H100A-SF6-160	6mm	6.30"	0.83"	1.06"
H100A-SF10-160	10mm	6.30"	0.94"	1.26"
H100A-SF12-160	12mm	6.30"	0.94"	1.26"
H100A-SF16-160	16mm	6.30"	1.06"	1.34"
H100A-SF20-160	20mm	6.30"	1.30"	1.65"
H100A-SF25-160	25mm	6.30"	1.73"	2.09"
H100A-SF32-160	32mm	6.30"	1.73"	2.09"

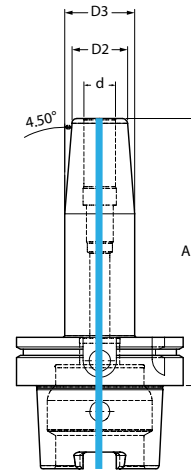

Extended - DIN69893A / DIN 69882-8

EXTENDED COOLANT PORTED

Part Number	d	A	D2	D3
H100A-SF0250-6.30CP	1/4"	6.30"	0.83"	1.06"
H100A-SF0375-6.30CP	3/8"	6.30"	0.94"	1.26"
H100A-SF0500-6.30CP	1/2"	6.30"	0.94"	1.26"
H100A-SF0625-6.30CP	5/8"	6.30"	1.06"	1.34"
H100A-SF0750-6.30CP	3/4"	6.30"	1.30"	1.65"
H100A-SF1000-6.30CP	1"	6.30"	1.73"	2.09"
H100A-SF1250-6.30CP	1.1/4"	6.30"	1.73"	2.09"
H100A-SF10-160CP	10mm	6.30"	0.94"	1.26"
H100A-SF12-160CP	12mm	6.30"	0.94"	1.26"
H100A-SF16-160CP	16mm	6.30"	1.06"	1.34"
H100A-SF20-160CP	20mm	6.30"	1.30"	1.65"
H100A-SF25-160CP	25mm	6.30"	1.73"	2.09"
H100A-SF32-160CP	32mm	6.30"	1.73"	2.09"

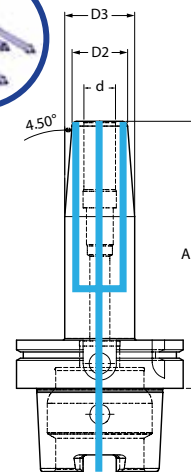

Coolant Port Option - DIN69893A / DIN 69882-8

Note: Coolant tube and coolant wrench not included.

Coolant Tube Wrench for HSK Holders

Part Number	Description
HSK63-WRENCH	Wrench for HSK63 Coolant Tube
HSK100-WRENCH	Wrench for HSK100 Coolant Tube



Note: Coolant Tube Wrenches are needed to remove or install coolant tubes in HSK toolholders.

Coolant Tube for HSK Holders

Part Number	Description
HSK63-TUBE	Coolant Tube for HSK63 holder
HSK100-TUBE	Coolant Tube for HSK100 holder

