

Accessories

Replacement Set Screws for End Mill Holders

Part Number	Size of Holder Internal Diameter
S6-32X1/4	1/8"
S8-32X1/4	3/16"
S1-14x7/8	2", 2-1/2"
S1/4-28x1/4	1/4", 6mm
S5/16-24X1/4	5/16", 8mm
S3/8-24X5/16	3/8", 7/16", 10mm
S7/16-20X3/8	1/2", 12mm
S9/16-18X1/2	5/8", 14-16mm
S5/8-18X1/2	3/4", 7/8", 18-20mm
S3/4-16X11/16	1", 1-1/4", 1-1/2", 25-42mm



Replacement Set Screws for Aerospace End Mill Holders

Part Number	Size of Holder Internal Diameter
S3/4-16x7/16	1", 1-1/4", 1-1/2", 2", 2-1/2"
S1/2-20UNF	5/8", 3/4", 7/8"
S3/8-24UNF	3/8", 1/2"



Coolant Tube for HSK holders

Part Number	Description
HSK63-TUBE	Coolant tube for HSK63 holders
HSK40-TUBE	Coolant tube for HSK40 holders
HSK100-TUBE	Coolant tube for HSK100 holders



Coolant Tube Wrench for HSK holders

Part Number	Description
HSK63-WRENCH	Wrench for HSK63 Coolant Tube
HSK40-WRENCH	Wrench for HSK40 Coolant Tube
HSK100-WRENCH	Wrench for HSK100 Coolant Tube

Coolant tube wrenches are needed to remove or install coolant tubes in HSK toolholders

