

REPAIR PARTS LIST

01	Spring Pin	(4)
02	Grip	(2)
03	Pin	(2)
04	Washer	(2)
05	Telescopic Beam	(2)
06	Standing Block	(2)
07	Screw	(2)
08	Standing Platform Assembly	(2)
09	Rubber Block	(4)
10	Chain	(1)
11	Adjustable Screw	(1)
12	Grip	(2)
13	Screw	(2)
14	Beam	(1)
15	Operating Clamp Assembly	(1)
16	Grip Handlebar	(2)

