



## Red Portable Zipper Bag 20 Litre Maintenance Spill Kit

SK-UTB

Spill kit | 20 Litre | Maintenance | Red vinyl with zipper fastening

Absorbency: 20 Litres | 5 US Gallons\*\*


Base Fibre: Cellulose




### Zipper Bag

This light weight yet tough zipper bag is perfect for transporting a quantity of sorbents to the site of a spill. The bag features high visibility red vinyl material with a wipe-clean surface and a zipper fastening along with tough webbing handles. Stash them easily behind truck seats or in the toolbox. Great for indoor or outdoor use at construction sites or in off-road applications.

### Spill kit's contents include:

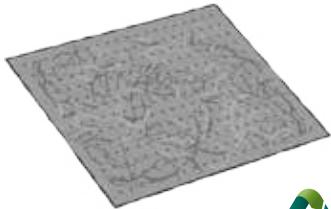

**10 x Pads**  
size 40 cm x 46 cm (16" x 18")

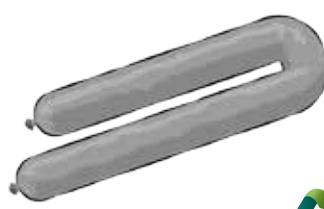

**3 x Socks**  
size 8 cm x 1.2 m (3" x 4')



**1 x Waste Bag**



**1 pair of gloves**

The pads in this spill kit are medium weight Coldform2™ and feature recycled and renewable sourced natural fibres. A spun-bond lamination is added for extra strength. These pads will recover both oil and water-based fluids.

These socks feature a spun-bond outer sleeve with a durable stitched seam. This tube is then filled with a next generation super absorbent flake core and sealed with a durable metal clip.

These are made from a tough grade of polythene. There is also a cable tie supplied so that the waste can be secured safely.

Waterproof gloves help to ensure safe handling of spilled substance.

### 1 pair of goggles

All-in one clear goggles provide eye protection from splashes.

\* Basis weights and recycled content are ± 5%

\*\* Measures a case/bale using ASTM 726 (long test) with medium viscosity oil and tap water. Statistical average derived from real time production QC data.

\*\*\* Weight per case ± 0.5 kg/lbs.

### Compliance

Related Regulations	Description
29 CFR 1910.120(j)(1)(vii)	...suitable quantities of proper absorbents shall be kept available and used in areas where spills, leaks or ruptures may occur.
29 CFR 1910.120(j)(1)(vii)	U.S. Department of Transportation specified salvage drums or containers and suitable quantities of proper absorbents shall be kept available and used in areas where spills, leaks or ruptures may occur.
29 CFR 1910.22(a)(2)	The floor of every workroom shall be maintained in a clean and, so far as possible, a dry condition.
40 CFR 263.31	Transporters "must clean up any hazardous waste discharge that occurs during transportation.