

TRAILER BITS

239TBT

The BEST choice when working in the Trailer, Truck and Bus Industry




DORMER PRAMET



TRAILER BITS

HSS • Jobber Drill • 135° Split Point • Steam Oxide

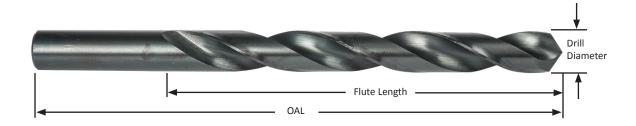

Ecode	Drill Diameter	Drill Diameter Decimal	Flute Length	OAL	EDP#
239TBT1/8	1/8	0.1250	1.5/8	2.3/4	041957
239TBT11/64	11/64	0.1719	2.1/8	3.1/4	041960
239TBTN11	#11	0.1910	2.5/16	3.1/2	041926
239TBT7/32	7/32	0.2188	2.1/2	3.3/4	041963
239TBT1/4	1/4	0.2500	2.3/4	4	041965
239TBTF	F	0.2570	2.7/8	4.1/8	041948
239TBT17/64	17/64	0.2656	2.7/8	4.1/8	041966
239TBT9/32	9/32	0.2813	2.15/16	4.1/4	041967
239TBT5/16	5/16	0.3125	3.3/16	4.1/2	041969

Drill diameter to rivet size cross reference

Rivet	Hole Diameter Limits		eCode	Probable	EDP#
Diameter (inch)	Min	Max	ecode	Hole Size	EDP#
1/8	0.1250"	0.1350"	239TBT1/8	0.1290"	041957
5/32	0.1560"	0.1710"	239TBT5/32	0.1610"	041959
3/16	0.1870"	0.2020"	239TBTN11	0.1958"	041926
7/32	0.2180"	0.2330"	239TBT7/32	0.2234"	041963
1/4	0.2500"	0.2650"	239TBT1/4	0.2559"	041965
			239TBTF	0.2629"	041948
9/32	0.2810"	0.2960"	239TBT9/32	0.2872"	041967
			239TBTL	0.2959"	041954
5/16	0.3120"	0.3270"	239TBT5/16	0.3184"	041969

